





Characteristic output and analogue curves	Default settings														
<p style="text-align: right;">155-01661</p>	<table border="1"> <thead> <tr> <th></th> <th>FT 25-RA-60</th> <th>FT 25-RA-170</th> </tr> </thead> <tbody> <tr> <td>Analogue output <math>Q_A</math> (1 ... 10V)</td> <td>20 ... 80 mm</td> <td>30 ... 200 mm</td> </tr> <tr> <td>Switching output Q (A1 ... A2), N.O.</td> <td>20 ... 80 mm</td> <td>30 ... 200 mm</td> </tr> </tbody> </table> <p><b>Accessories</b></p> <table border="1"> <tr> <td>Connection cables</td> <td rowspan="3"><a href="http://www.sensopart.com/en/accessories">www.sensopart.com/en/accessories</a></td> </tr> <tr> <td>Brackets</td> </tr> <tr> <td>Sensolo (901-01001)</td> </tr> </table> <p style="text-align: right;">155-01681</p>			FT 25-RA-60	FT 25-RA-170	Analogue output $Q_A$ (1 ... 10V)	20 ... 80 mm	30 ... 200 mm	Switching output Q (A1 ... A2), N.O.	20 ... 80 mm	30 ... 200 mm	Connection cables	<a href="http://www.sensopart.com/en/accessories">www.sensopart.com/en/accessories</a>	Brackets	Sensolo (901-01001)
	FT 25-RA-60	FT 25-RA-170													
Analogue output $Q_A$ (1 ... 10V)	20 ... 80 mm	30 ... 200 mm													
Switching output Q (A1 ... A2), N.O.	20 ... 80 mm	30 ... 200 mm													
Connection cables	<a href="http://www.sensopart.com/en/accessories">www.sensopart.com/en/accessories</a>														
Brackets															
Sensolo (901-01001)															